


Access Panel FR120 / Fitting Instructions



1 A Unistrut frame is constructed in the desired location and fixed into a fire rated substrate.

The aperture of the framework should be the size of the panel + 7mm.

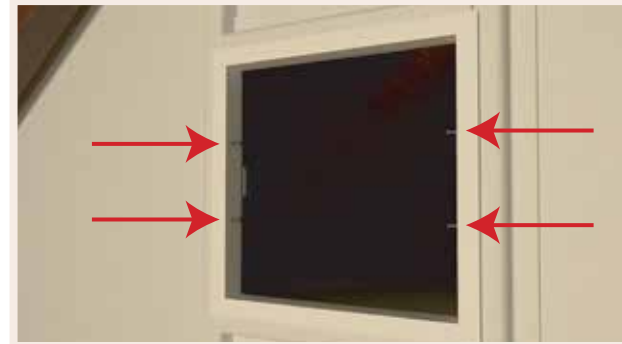


4 The access panel is inserted and fitted flush up to its flange plate.


It is screwed into the side of the Unistrut framework through the predrilled clearance holes provided.



2 The framework should be wrapped and related barrier fitted before the access panel is installed.

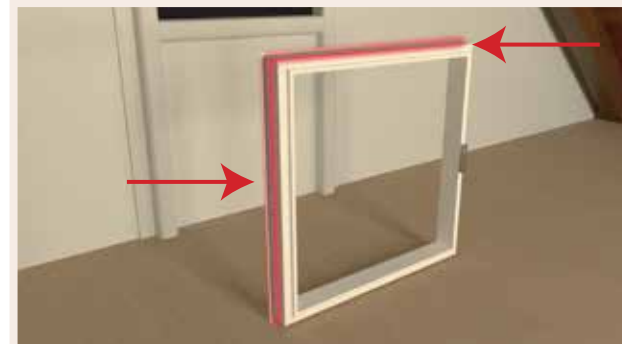

5 A bead of FIREFLY[®] high temperature adhesive is applied all outer edges of the access panel.

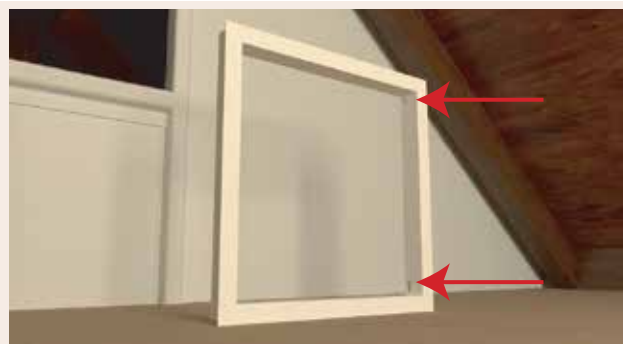

3 The door of the access panel can be removed before fitting, although not always necessary.

The door can be removed and reattached by removing and refitting the hinge bolts.



6 The door is rehung as per Step 3 and checked to ensure it fits flush into its frame.

Your installation of FIREFLY[®] Access Panel FR120 is complete.